

## Audi A7/S7/RS7

2010 to 2018

Our ref: H0546

Packing requirements BOOTLINER

- 800mm cut length of 30mm wide self-adhesive loop fasteners
- TAILGATE COVER
- Minimum of 18 Self-adhesive loop fastener tabs



### VERY IMPORTANT PREPARATION

To ensure a good bond, when using the self-adhesive fasteners to attach the Bootliner to the plastic / metal trim (**Not** the carpet); it is most important to remove silicone film from the vehicle trim. Silicone is applied during manufacture and can also be found in many valeting products. It is **highly likely there will be a build-up of silicone**. Before applying any self-adhesive fastener pads, the surface **MUST be thoroughly** cleaned using a silicone remover. (The fasteners cannot be used once it has been in contact with silicone). We recommend "Intensive Tar Remover" made by AutoGlym and available from Halfords. Wipe off thoroughly **any residue with a separate clean dry cloth**.

**NOTE:** the adhesive takes 24hrs to reach full adhesion – do not disturb during.



### PREPARATION

- Unfold the Hatchbag and place in the vehicle so that the base fits snugly in position. The panel with the Hatchbag label sits against the back of the rear seat.

*Please note not all the photographs are specific to your vehicle*

#### BASE

- Position the base snugly into place. Start at the tailgate end.
- The hook fastener welded to the reverse face of the liner will attach directly to the carpet panels in the floor.



#### BACK

- Cut the long length of self-adhesive loop fastener to fit and apply to the tailgate chrome tailgate plate.  
Tip: lift the rubber seal, part of the fastener can sit under it.



## FITTING FRONT

- Hook & loop fastener straps align to headrests.
- Pass around each post and fasten back onto themselves.
- The hook fastener welded to the reverse face of the liner will attach directly to the carpet panels.



## REAR PLUS VERSIONS

- **YOU MUST UNFASTEN THE HOOK & LOOP FASTENER + THE HEADREST STRAPS BEFORE YOU RECLINE THE REAR SEAT UPPERS** (Please refer to REAR PLUS options on website to see detailed photo')

## SIDES

- Carefully position the side panels snugly into place.
- The hook fastener welded to the reverse face of the liner will attach directly to the carpet panels.



## Optional extras

### FREQUENT USE KIT

If you frequently remove/fit your Boot Liner from/to your vehicle, please note that the carpet will “fluff” up – we have an alternative “Frequent Use Fitting Kit”


The Frequent Use Kit is available to buy from our “on-line” Factory Shop – simply add it to your order from the Factory Shop.



*Please note not all the photographs are specific to your vehicle*

### TAILGATE COVER

- Use the self-adhesive loop fastener tabs to attach the cover to the plastic trim.
- If you wish to replace the Audi Load Cover, you will need to place two appropriate holes in the Tailgate Cover. The PVC fabric does not fray – BUT ensure you do NOT cut through the “tape/stitching”

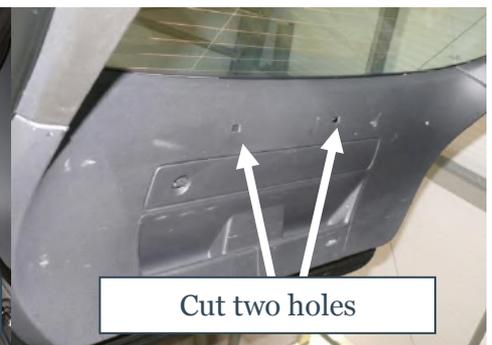



## BUMPER FLAP

- Fit Bootliner
- Attach the Bumper Flap to the loop fastener strip that has been manufactured into the base of the boot liner.
- The Bumper Flap either folds into the vehicle OR can be detached and stored elsewhere when you close the tailgate.



## SEAT FLAP

- The Seat flap is designed to protect the top of your rear seat giving additional protection from drooling dogs etc.
- The Seat Flap can also be used in conjunction with the **Rear Plus** Option(s). With the rear seats in the folded position the Seat Flap extends the coverage over any exposed section of the seat backs and the headrests
- Attach the Seat Flap to the loop fastener strip that has been manufactured into the Boot Liner just below the top of the rear seats.
- The flap is then placed over the rear head rests and down the back of the passenger seats.
- If the Seat Flap sits over large headrests and obstructs your rear view: carefully create openings in the flap to accommodate the headrest posts.



## FLOOR EXTENSION

The "Floor extension" offers superior protection to the rear seats when purchased in conjunction with a REAR PLUS option.

- The **Floor extension** is designed to attach to a Rear Plus version liner.
- It offers additional protection to the back of the front seats and the extended floor area when the rear seats are folded flat.

The max width is 148cm (see photo on left).

It will offer no protection to the rear doors



**PLEASE REQUEST FURTHER INFORMATION AS YOU PLACE YOUR ORDER**  
**(These items cannot be added at a late date)**